




Installation Guide


ECOBLCS – Bin Storage with Lid, Charcoal, Single



















ECOBLWS – Bin Storage with Lid, Charcoal and Woodgrain, Single

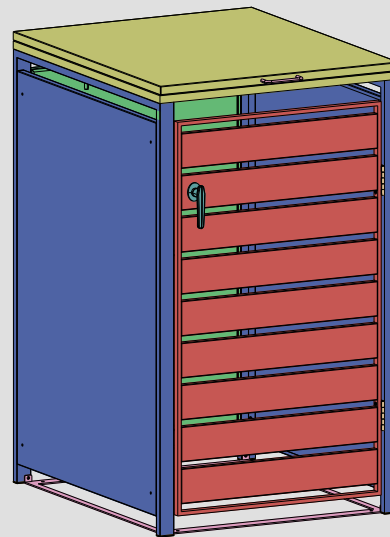

Distributed by




BMARCHITECTURAL

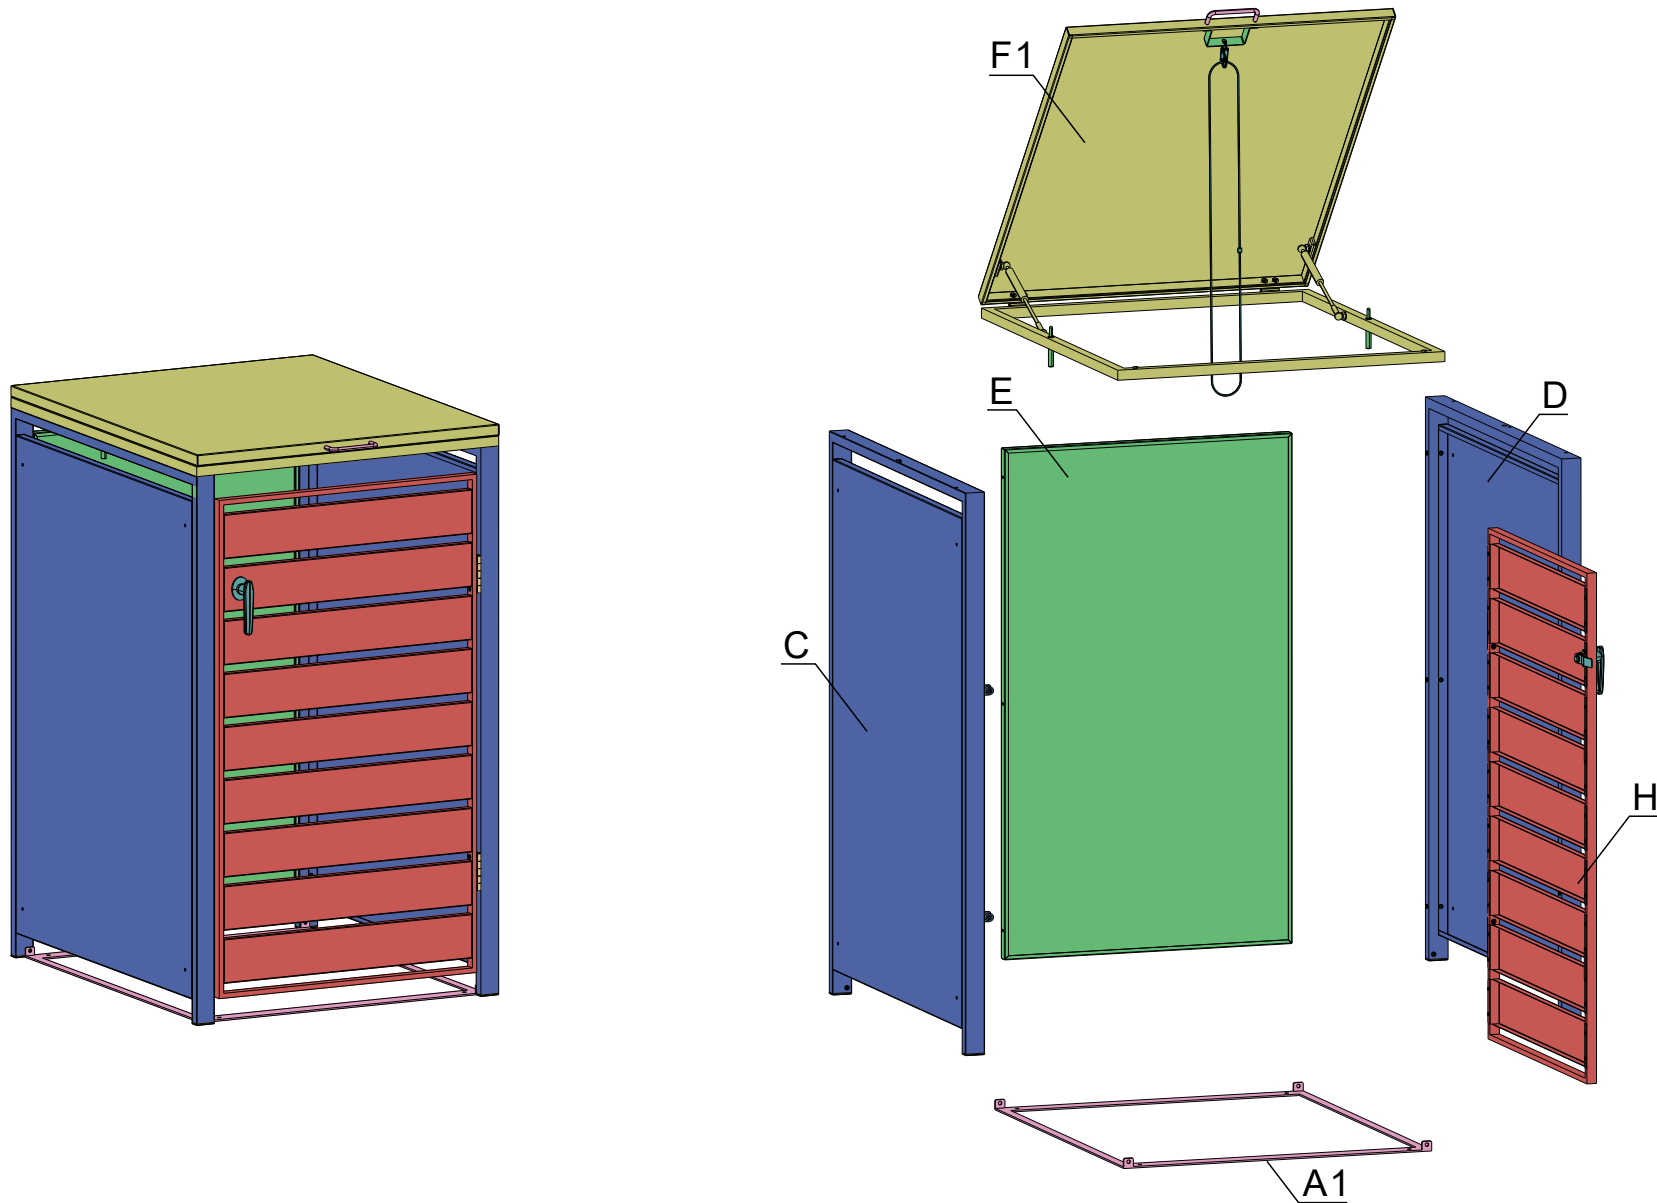

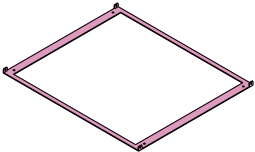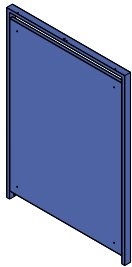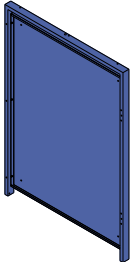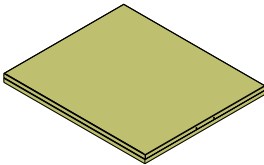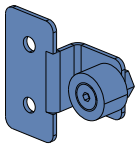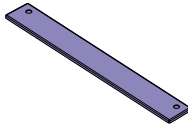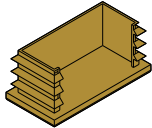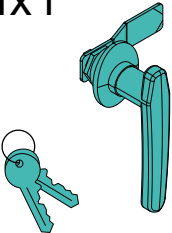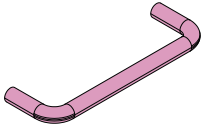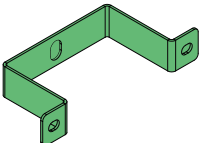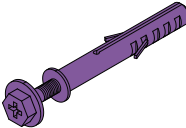
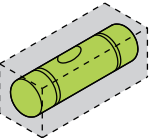
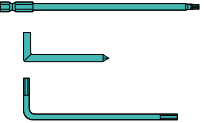
A1x1 	Cx1 	Dx1 	Ex1 	F1x1 		
Hx1 	I1x2 	Jx1 	Kx2 	Lx4 		
Mx1 	Nx1 	Ox1 	Px2 	Qx4 	Rx10 	Sx8 
					M4x10mm	M4x20mm
Tx6 	Ux16 	Vx1 	Wx4 	Xx4 	Yx1 	Zx1 
M4x30mm	M4x14mm					

If you want to connect another bin storage please use part S, W and X.




STEP 1

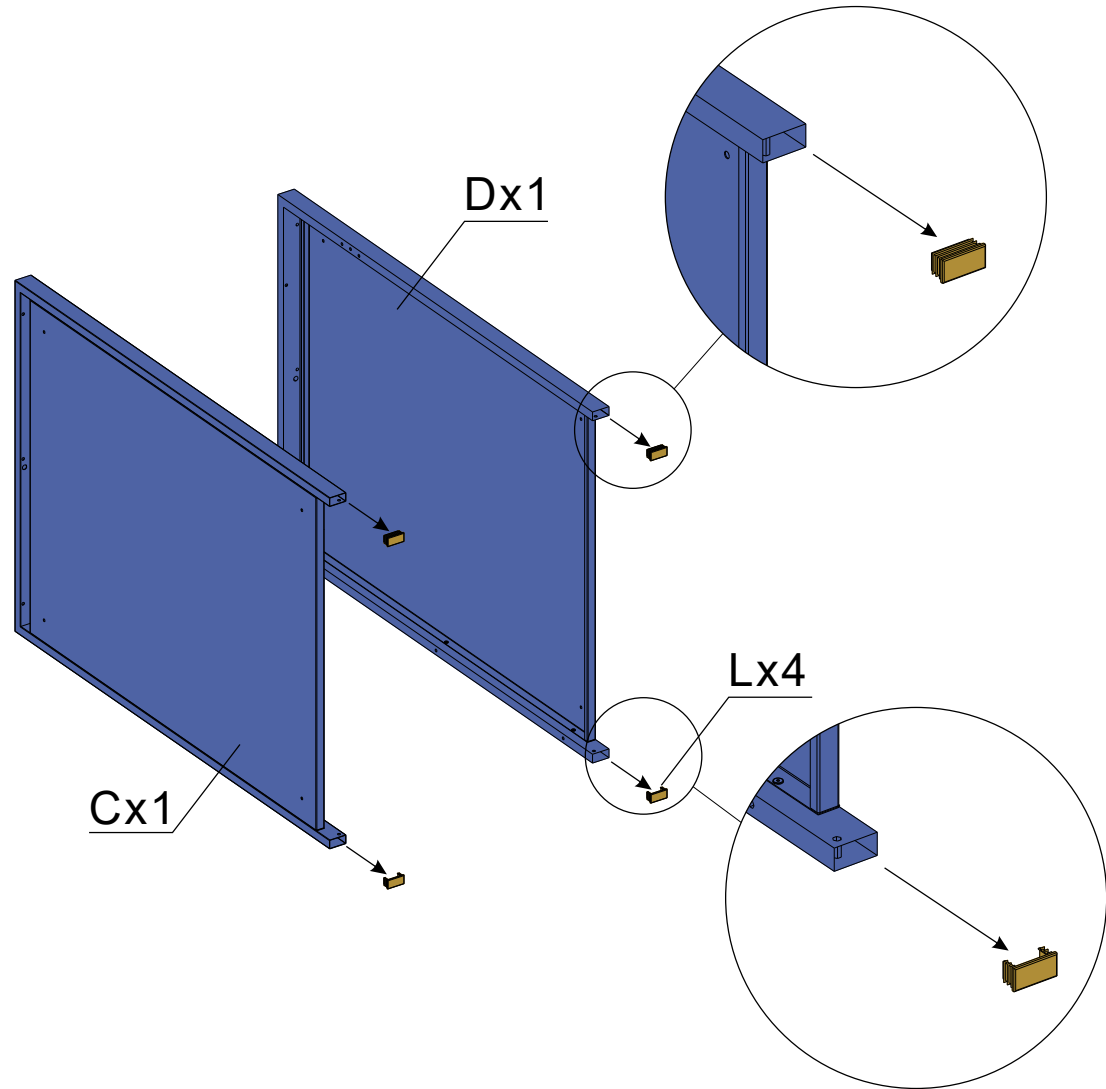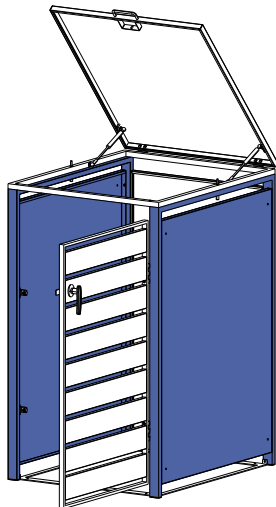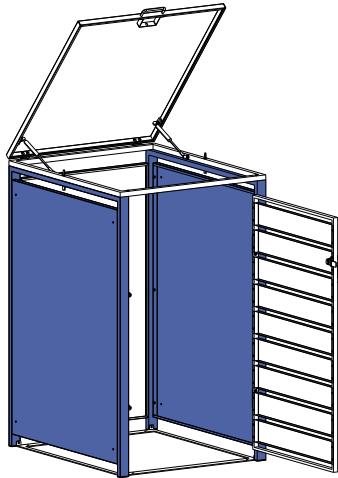




STEP 2

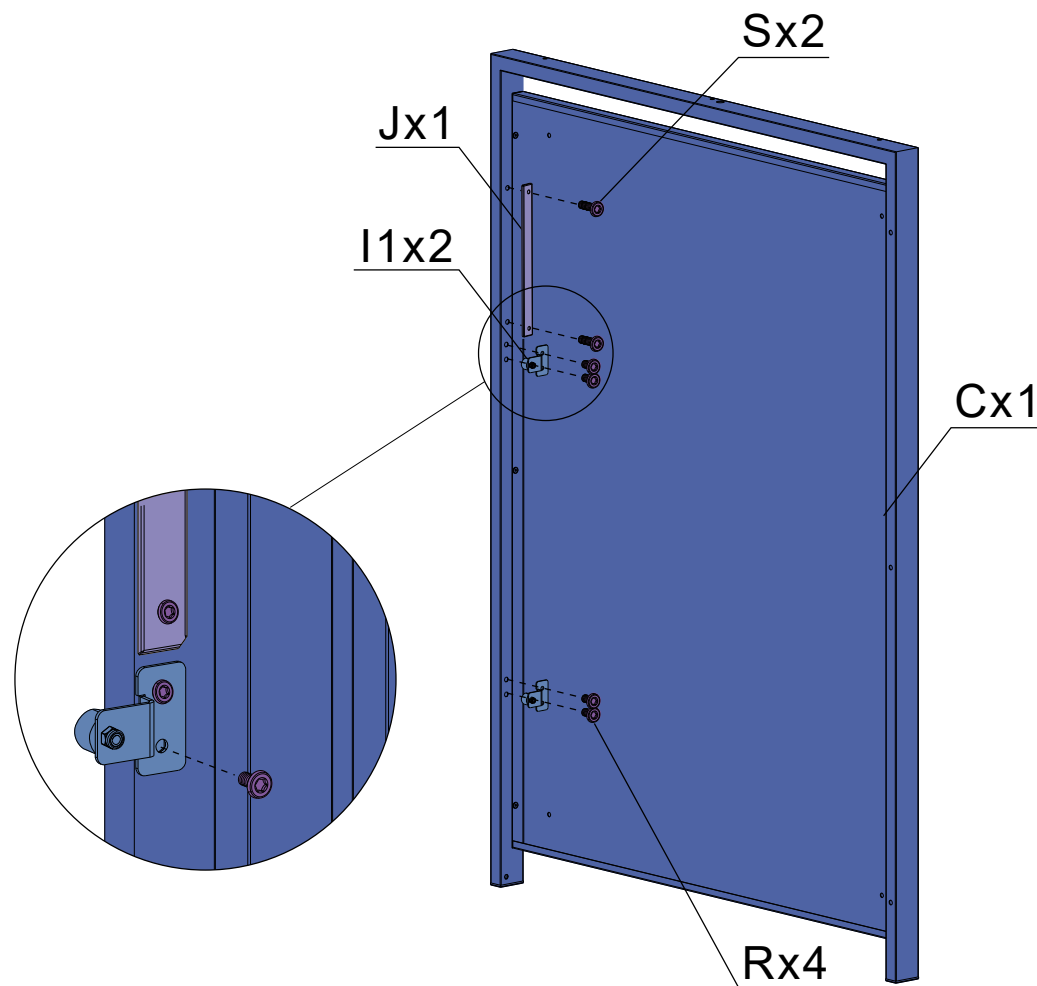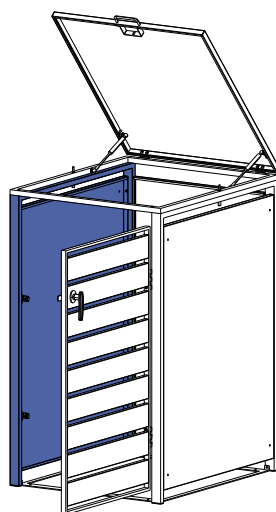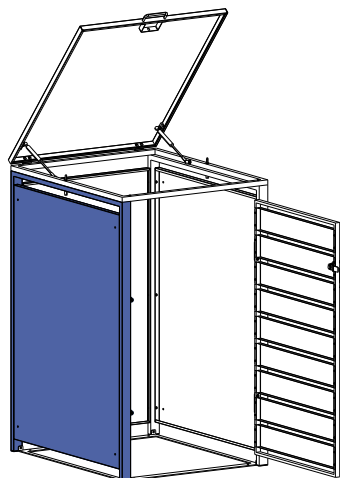



STEP 3

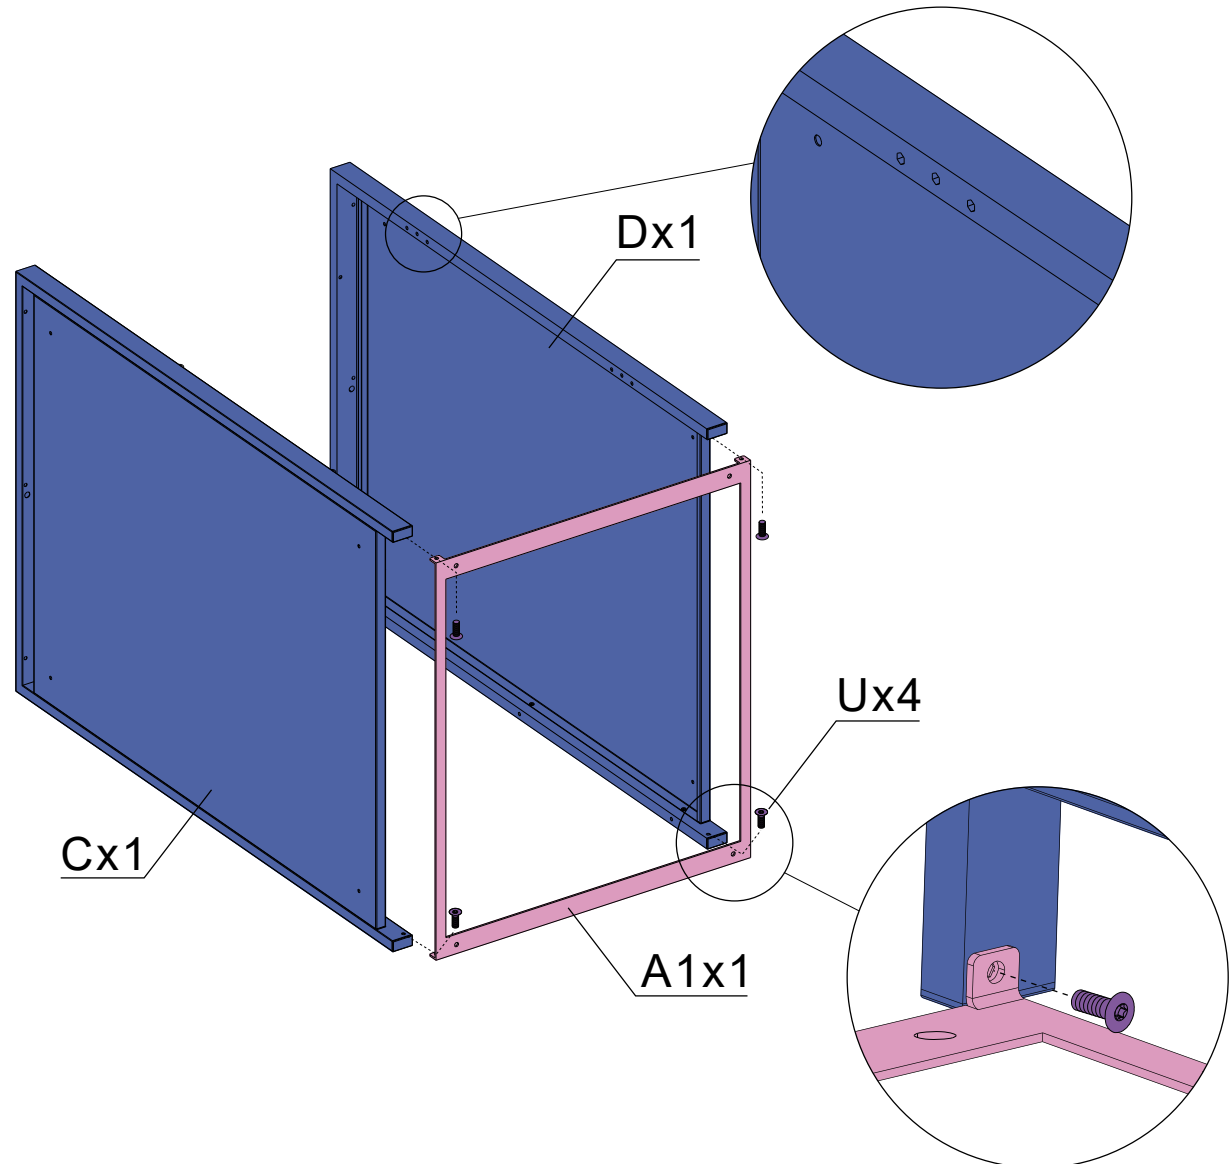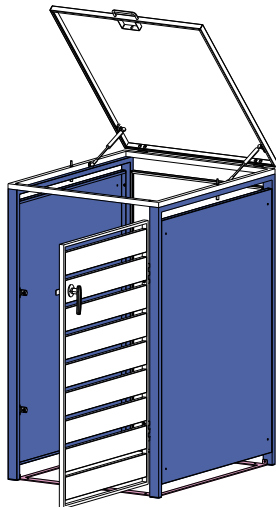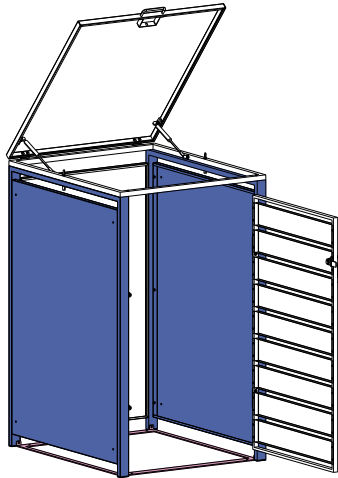


STEP 4

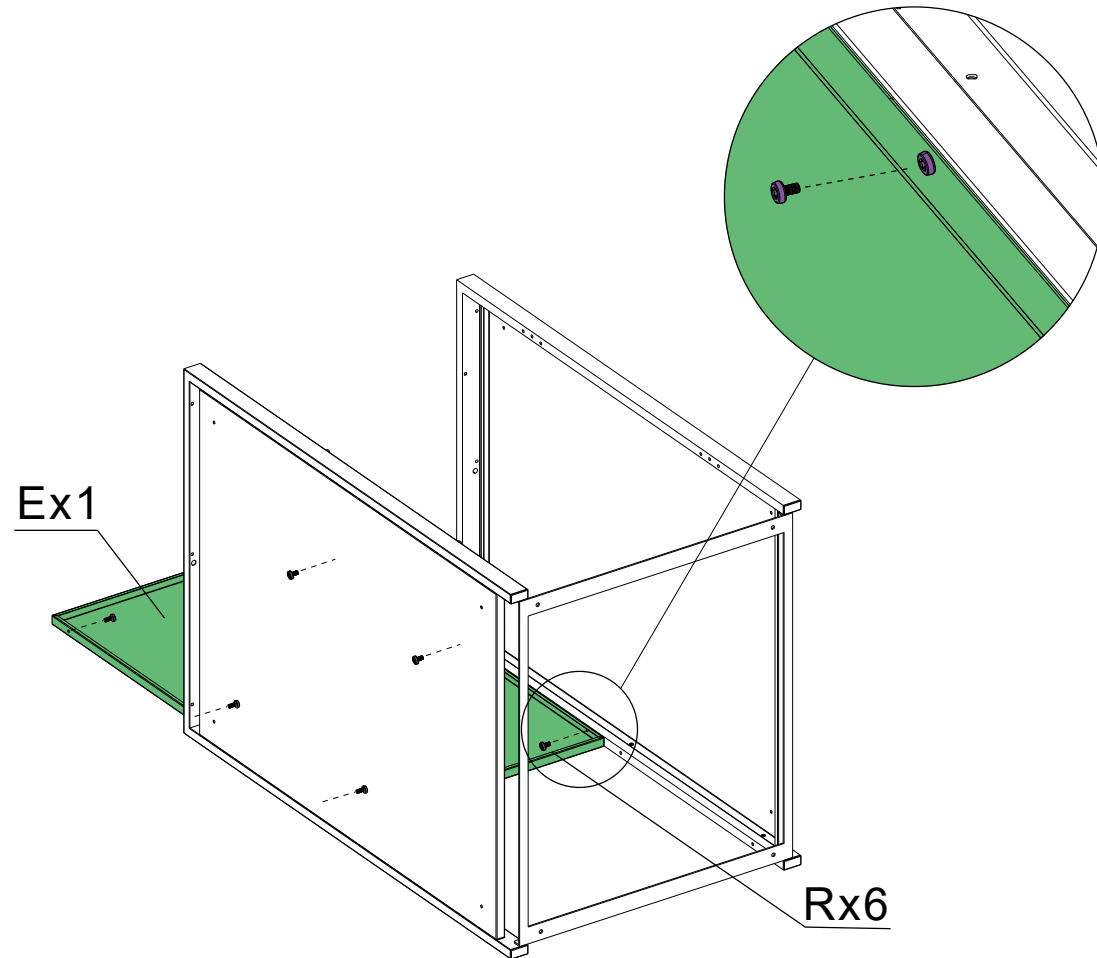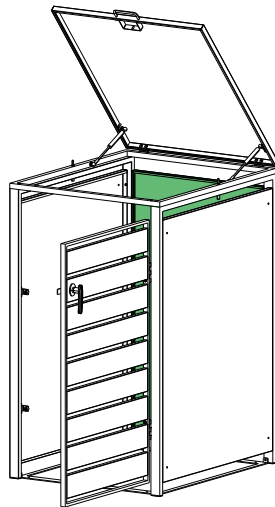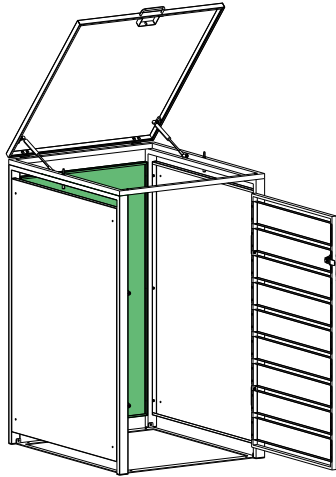

STEP 5


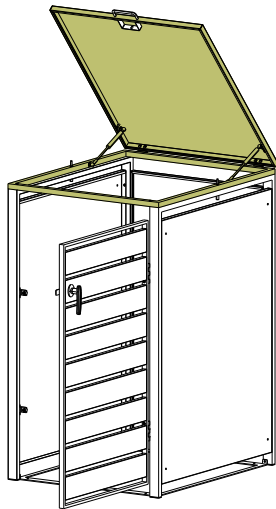
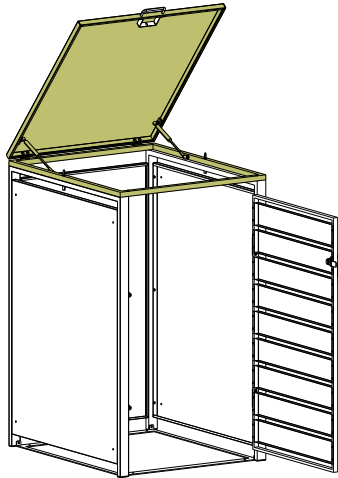


F1x1




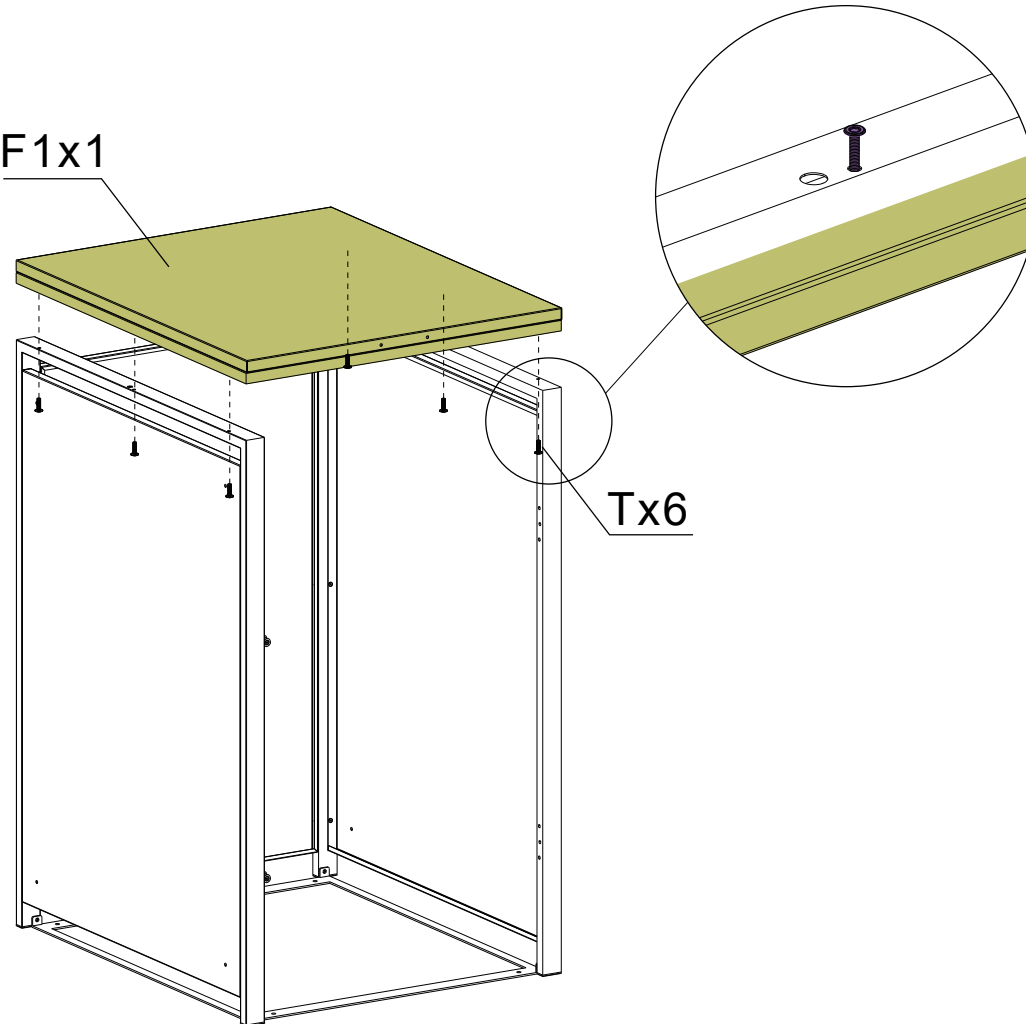


T6x6


STEP 6

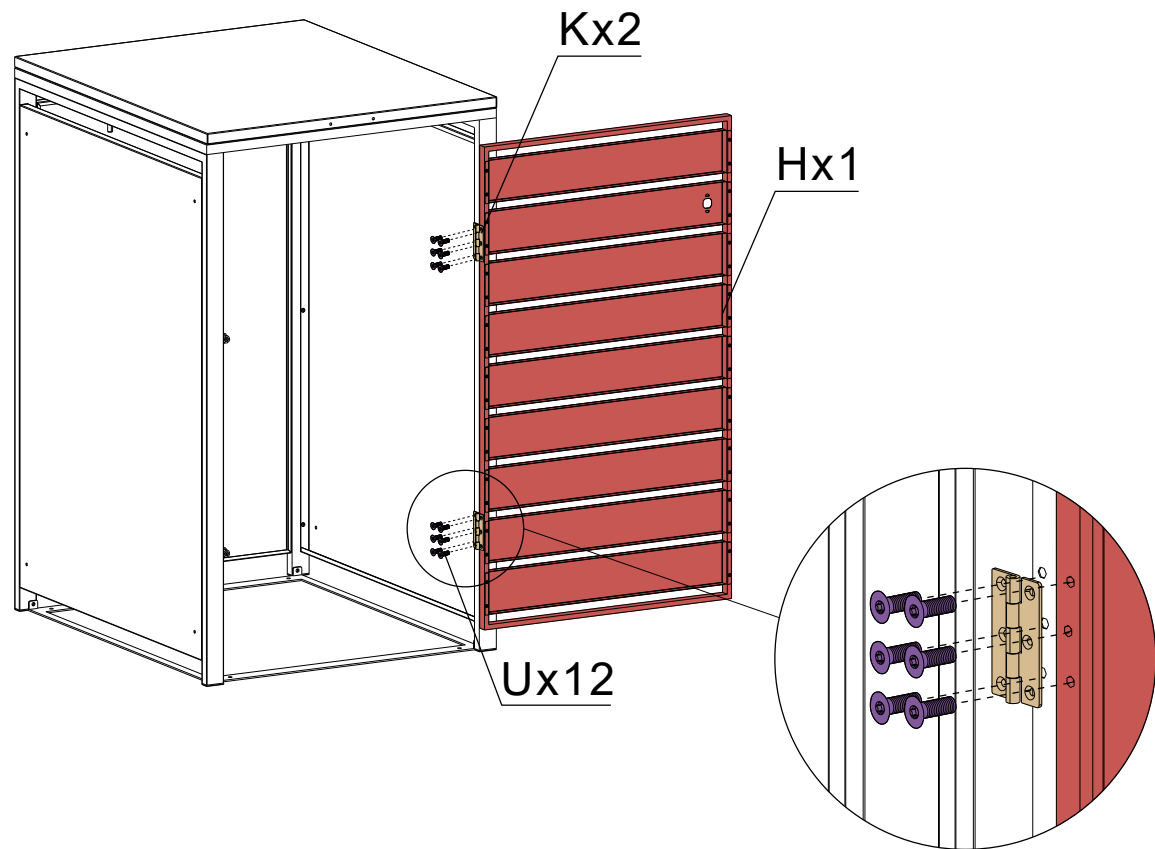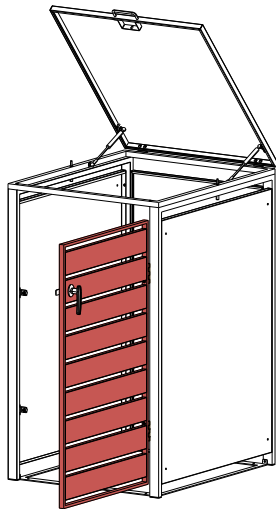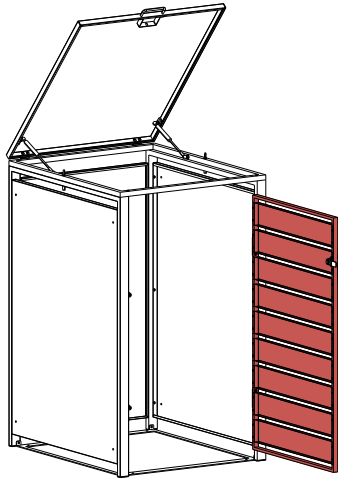




STEP 7

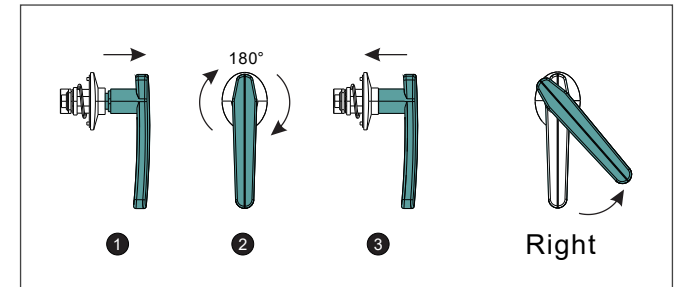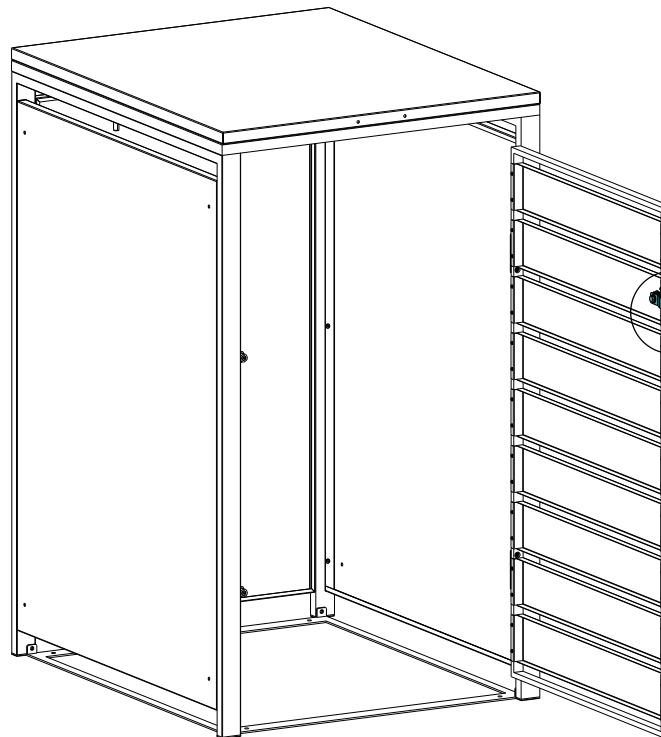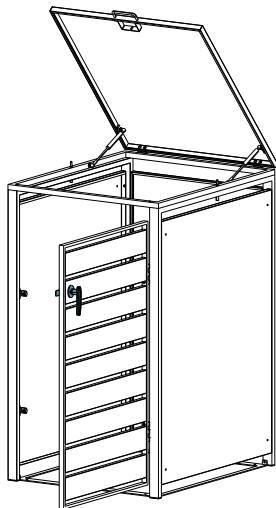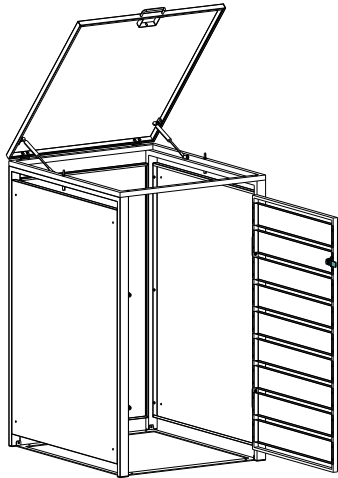


Mx1

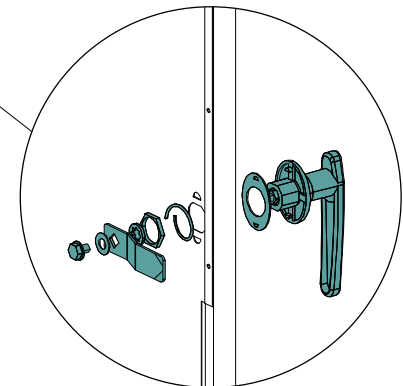


STEP 8

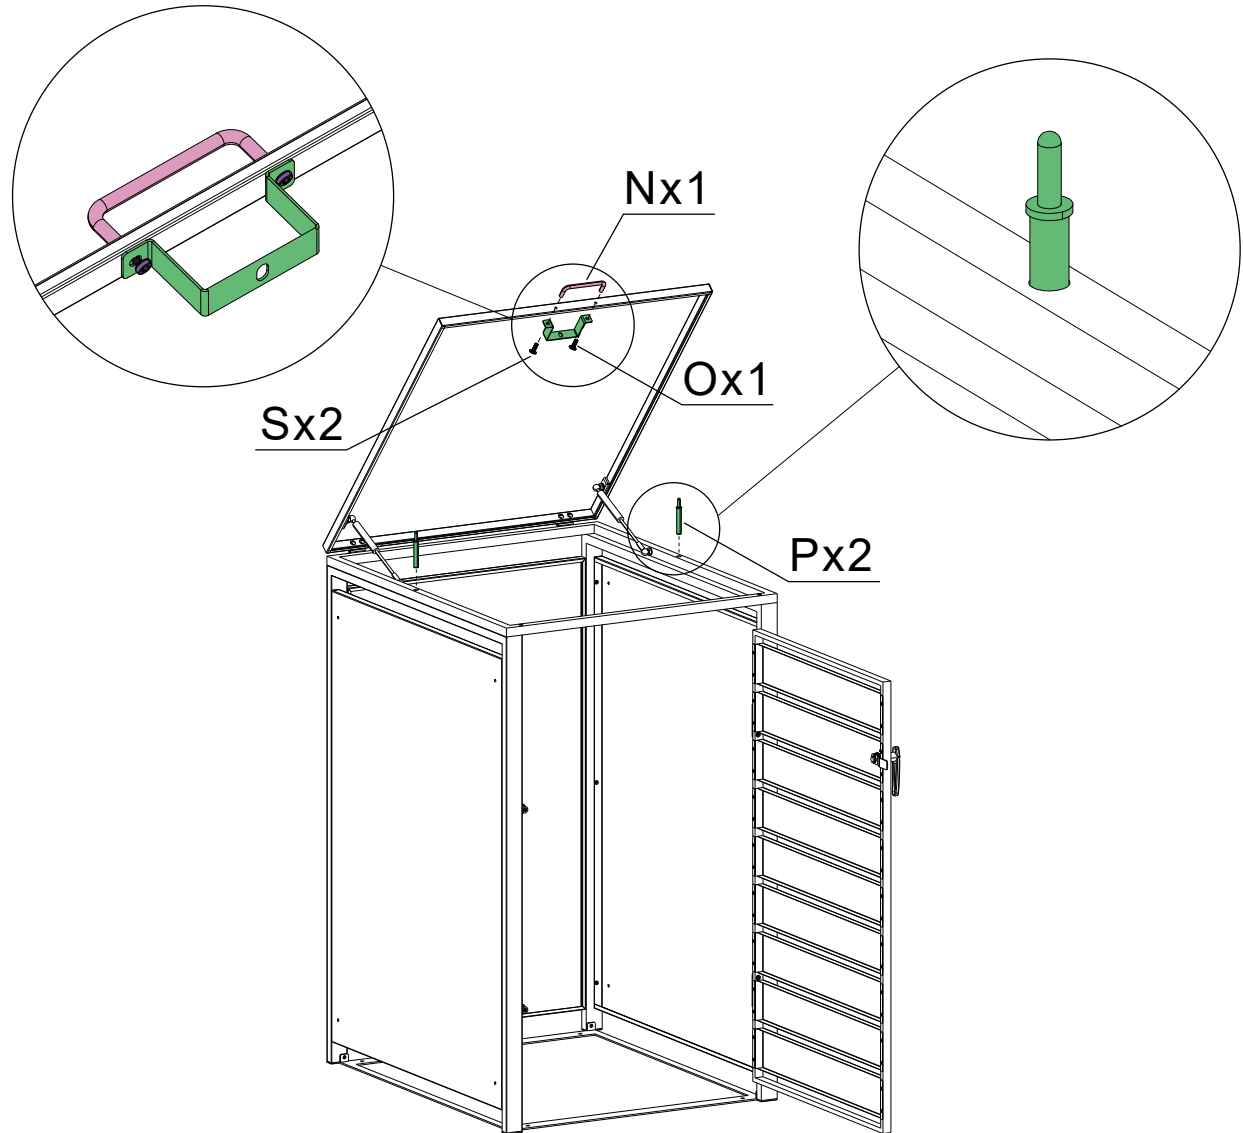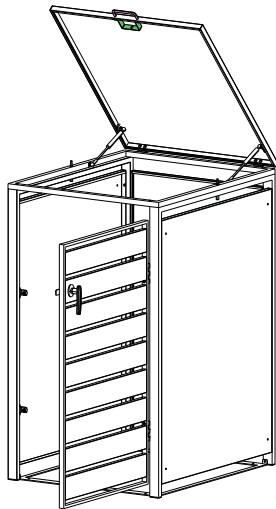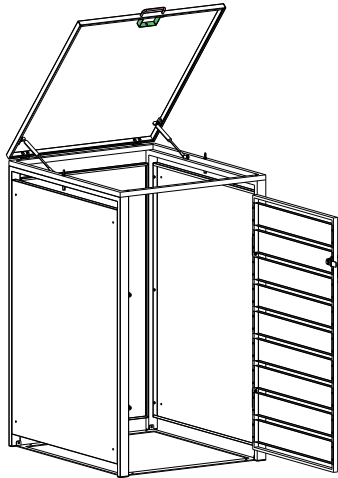

STEP 9

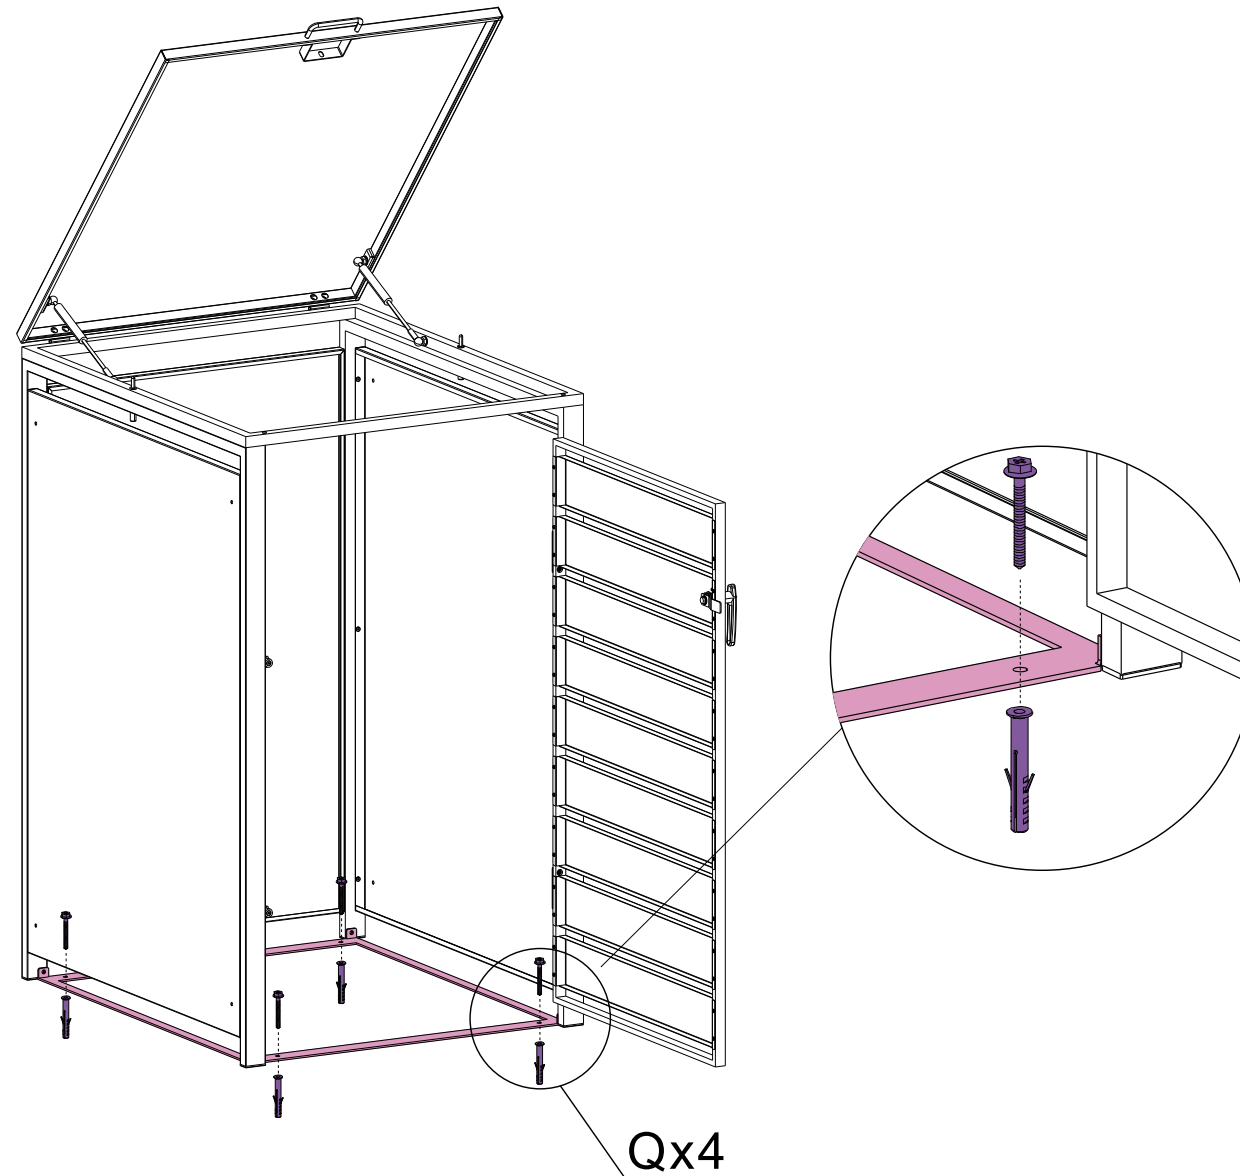

STEP 10

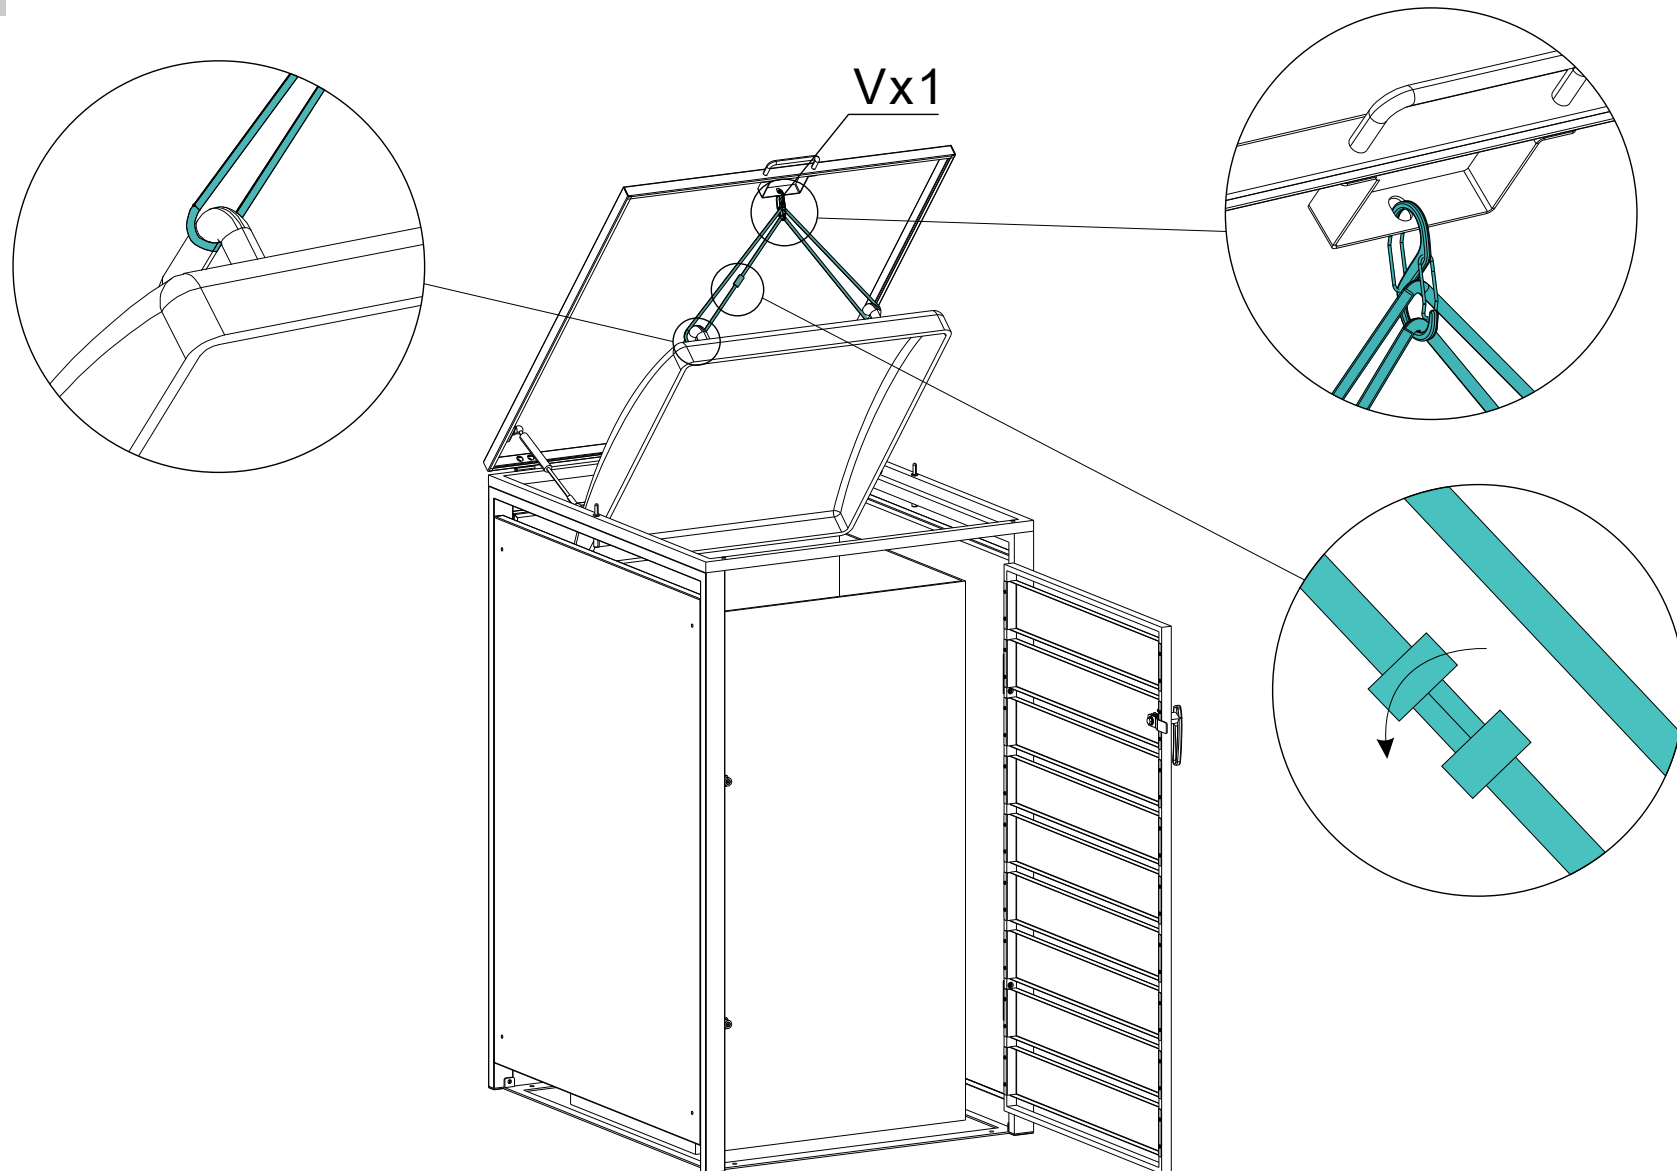

Contact Ecoscape on:
sales@ecoscape.co.uk
01706 364 637

Contact BM Architectural on:
sales@bmarchitectural.com
0114 254 3226



Distributed by

BMARCHITECTURAL